


BakerSeries Electric Mini Rotating Rack Oven MODEL: LMO-E - Series

INSTALLATION REQUIREMENT

Ships Full Assembled, will fit through 40" Opening with out removal of door
 Remove door, hinges and latch for movement through 36" door opening
 Product of combustion must be vented to the outside

OPTIONS & ACCESSORIES

Stand with Rack Slides 6-Pan Rack 60-Recipe Controller
 Proofer Base 8-Pan Rack Start-up and Training Water Connection Kit

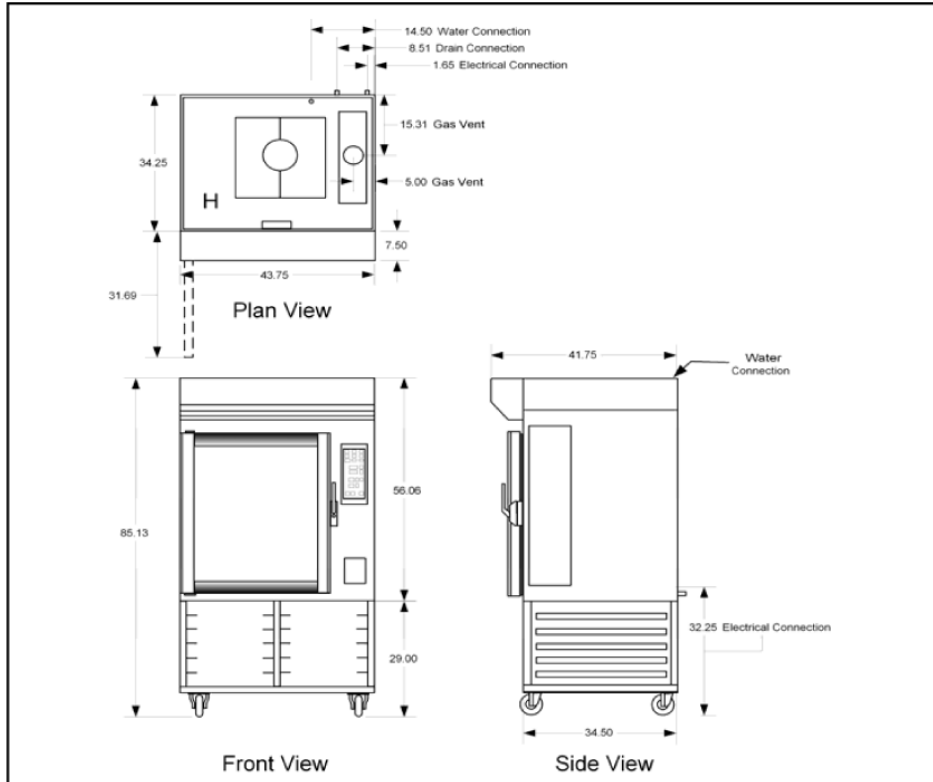

| Model | H | W | D | Clearance to Combustible Surfaces | Weight | Freight Class |
|------------|--------|--------|--------|------------------------------------|--------|---------------|
| LMO-E | 56.06" | 43.75" | 41.75" | 0" Sides and Back 6" Front and Top | 900 | 85 |
| With Stand | 85.13" | 43.75" | 41.75" | | | |

| Model | Electrical Requirements | | | | | | | | Water Supply | Drain |
|-------|-------------------------|----|------|------|-----|-----|-------------|--------------|---|--------------------------|
| | Volts | PH | KW | AMPS | | | Max Breaker | Min. Circuit | | |
| LMO-E | 120 VAC | 1 | N/A | 7 | N/A | N/A | 15 | 15 | 3/8" Cold Water 0.75 GPM @ 20 PSI | Air Gap routed from rear |
| | 208 VAC | 3 | 12.5 | 39 | 26 | 39 | 50 | 50 | | |
| | 240 VAC | 3 | 12.5 | 30 | 30 | 30 | 50 | 40 | | |
| | 480 VAC | 3 | 12.5 | 15 | 15 | 15 | 30 | 20 | | |

Requires two Electrical Connections one (1) 120 VAC Single Phase one (1) 208, 240 or 480 VAC Three Phase (Specify at time of order).

MINIMUM WATER QUALITY

| | | |
|--|--|---|
| <ul style="list-style-type: none"> pH between 7.0 and 7.5 Total dissolved solids less than 100 PPM Chlorine less than 1 PPM Iron less than 0.1 PPM | <ul style="list-style-type: none"> Manganese less than 0.05 PPM Conductivity less than 1/500,000Ω per inch Hardness from 6.3 to 8.8 grains per gallon Chlorides less than 30 PPM | <ul style="list-style-type: none"> Sulfates less than 40 PPM Copper less than 0.05 PPM Chloramines less than 1 PPM |
|--|--|---|

IMPORTANT: Your local water conditions may damage your Lang equipment. Failure to properly treat water may result in damage and may void some or all of the warranty. Information on water quality requirements is in the operator's manual provided with each unit, which can be accessed through the Lang web site at www.langworld.com/products.